

Version:
December 1, 2022



Assembly Method

Token Electronics Industry Co., Ltd.

Taiwan: No.137, Sec. 1, Zhongxing Rd., Wugu District,
New Taipei City, Taiwan. 248012
Tel: +886 2981 0109 Fax: +886 2988 7487

China: 17P, Nanyuan Maple Leaf Bldg., Nanshan Ave.,
Nanshan Dist., Shenzhen, Guangdong, China. 518054
Tel: +86 755 26055363


Web: www.token.com.tw

Email: rfq@token.com.tw



Assembly Method

Wirewound Power Resistor Mounting & Assembly Method

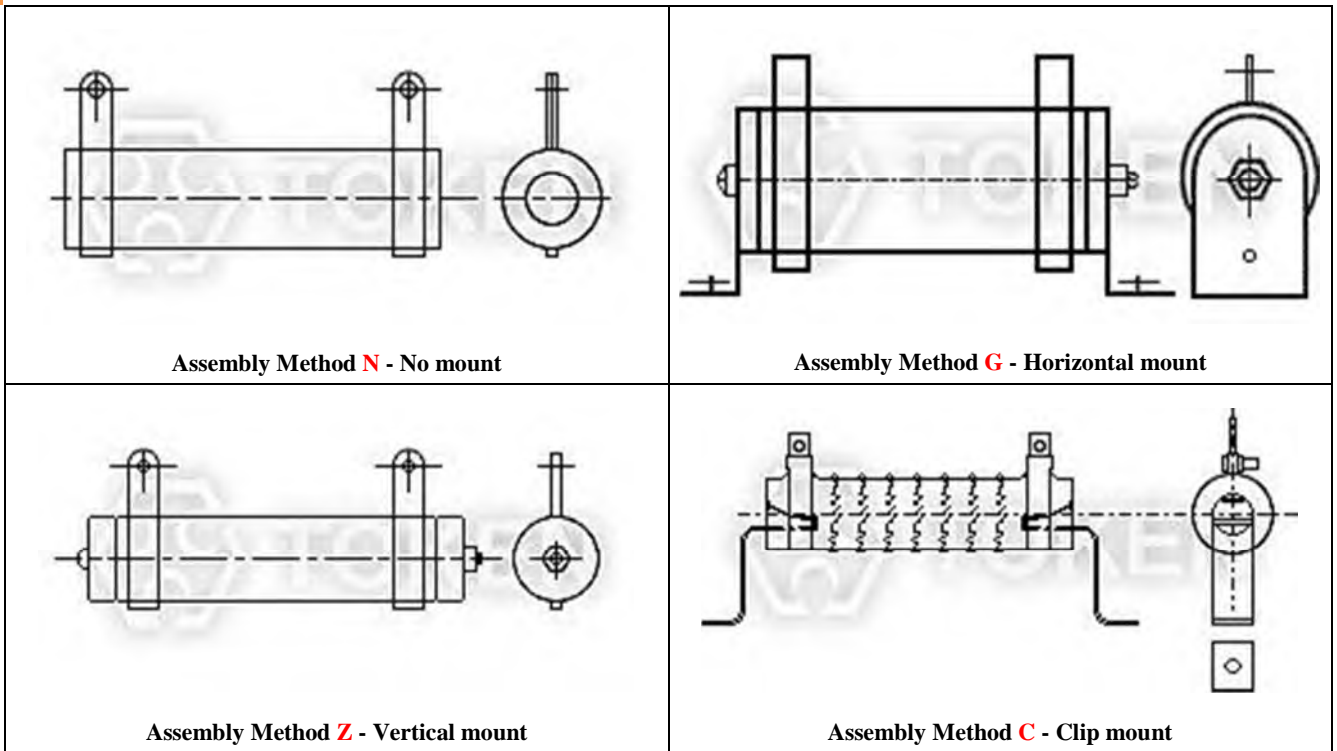

Order Codes Example

Wirewound Power Resistor Order Codes Example

DDR	1000W	500R	J	G
Part Number	Rated Power (W)	Resistance Value (Ω)	Resistance Tolerance (%)	Assembly Method
DDR	10W~1300W	Indicates resistance value in units of ohms.	J $\pm 5\%$	N No mount.
DCR	100W~250W		K $\pm 10\%$	C Clip mount.
				G Horizontal mount.
				Z Vertical mount.