

Version:
January 13, 2017



Assembly Method

Token Electronics Industry Co., Ltd.

Taiwan: No.137, Sec. 1, Zhongxing Rd., Wugu District,
New Taipei City, Taiwan, R.O.C. 24872
Tel: +886 2981 0109 Fax: +886 2988 7487

China: 12F, Zhong Xing Industry Bld., Chuang Ye Road,
Nan Shan District, Shen Zhen City,
Guang Dong, China 518054
Tel: +86 755 26055363; Fax: +86 755 26055365


[Web: www.token.com.tw](http://www.token.com.tw)

[Email: rfq@token.com.tw](mailto:rfq@token.com.tw)



Assembly Method

Wirewound Power Resistor Mounting & Assembly Method

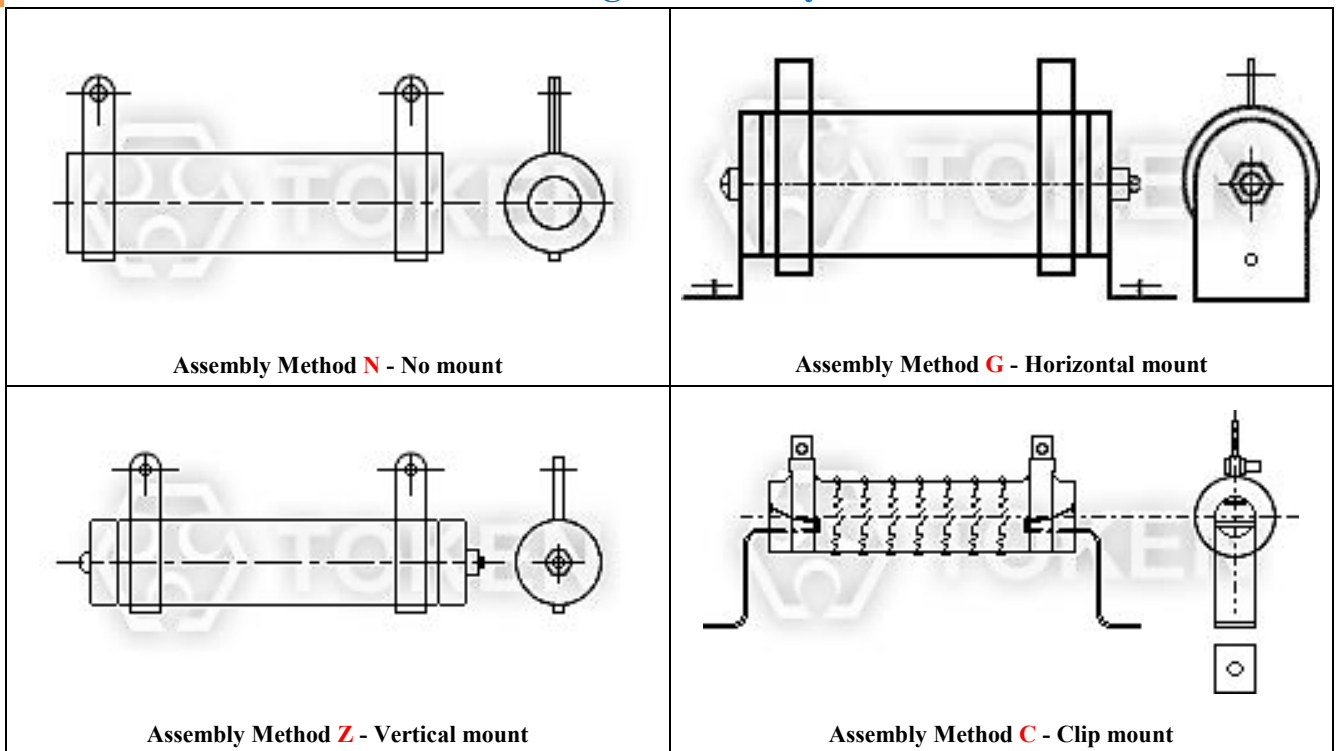

Order Codes Example

Wirewound Power Resistor Order Codes Example

DDR	1000W	500R	J	G
Part Number	Rated Power (W)	Resistance Value (Ω)	Resistance Tolerance (%)	Assembly Method
DDR	10W~1300W	Indicates resistance value in units of ohms.	J $\pm 5\%$	N No mount.
DCR	100W~250W		K $\pm 10\%$	C Clip mount.
				G Horizontal mount.
				Z Vertical mount.